



Troubleshooting

Problem	Cause	Remedy
The appliance does not switch on.	No power is applied.	Check whether a fuse or RCD breaker has tripped in the domestic installation.
		Check that the mains plug is plugged in correctly.
	Print control defective	Install a new print control, remove the print control from a functioning device and install it in the defective device to be sure whether it is due to the print control.
	Heating defective	Install a new heater, remove the heater from a working appliance and install it in the defective one to be sure whether it is due to the heater.
Motor does not turn	Motor/heater is defective or the starting capacitor on the print control is defective	Install a new motor or replace the print control. Install new heater
Hair dryer functions, but only with cold air	Heating defective	Installing a new heating system